
KenroyHome

ALL•TOGHTHER•BETTER

USE AND CARE GUIDE

LEAH ARC FLOOR LAMP-32849

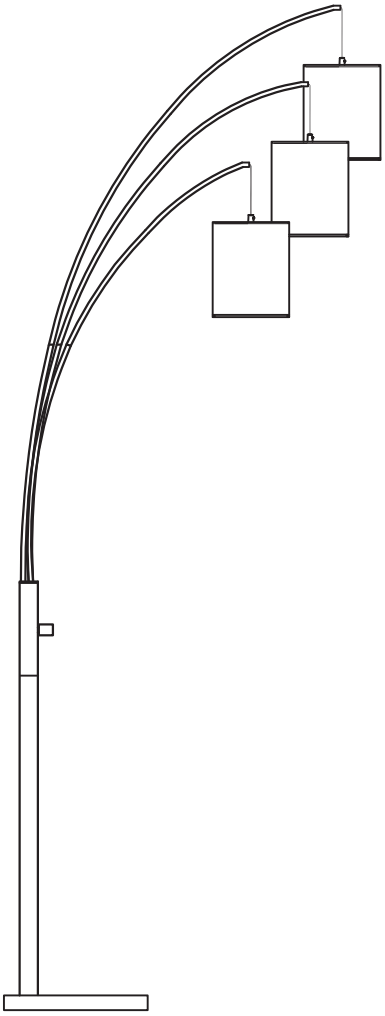

Questions, problems, missing parts? Before returning to the store,
Please reach Lucidity lights Customer Service

consumer@luciditylights.com

24 hours , Monday-Friday

THANK YOU

We appreciate the trust and confidence you have placed in Lucidity lights through the purchase of this lamp.
We strive to continually create quality products designed to enhance your home.
Thank you for choosing us!

Table of Contents

Safety Information 2

Warranty 2

Pre-Installation 3

Planning Installation 3

Package Contents 3

Assembly 4, 5, 6

Care and Cleaning 7

Troubleshooting 7

Safety Information

Consult a qualified electrician with any electrical questions you may have.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process. Please reach our Customer Service Team at consumer@luciditylights.com.

Warranty

1-YEAR LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this lamp to be free from defects in the materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, assembled, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship.

WHAT IS NOT COVERED

This warranty shall not apply to the finish on any portion of the product due to weathering, as this is considered normal wear. The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to, any labor or expense costs involved in the replacement or repair of the product.

Contact the Customer Service Team at consumer@luciditylights.com.

Pre-Installation

PLANNING INSTALLATION


Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard. Inspect each part for defects that may have occurred during shipping.

Keep your receipt and these instructions for proof of purchase.

NOTE: This lamp requires the use of three 120V, 60HZ, 60-Watt max, medium-base type A bulbs (not included). Do not exceed the recommended wattage.

PACKAGE CONTENTS

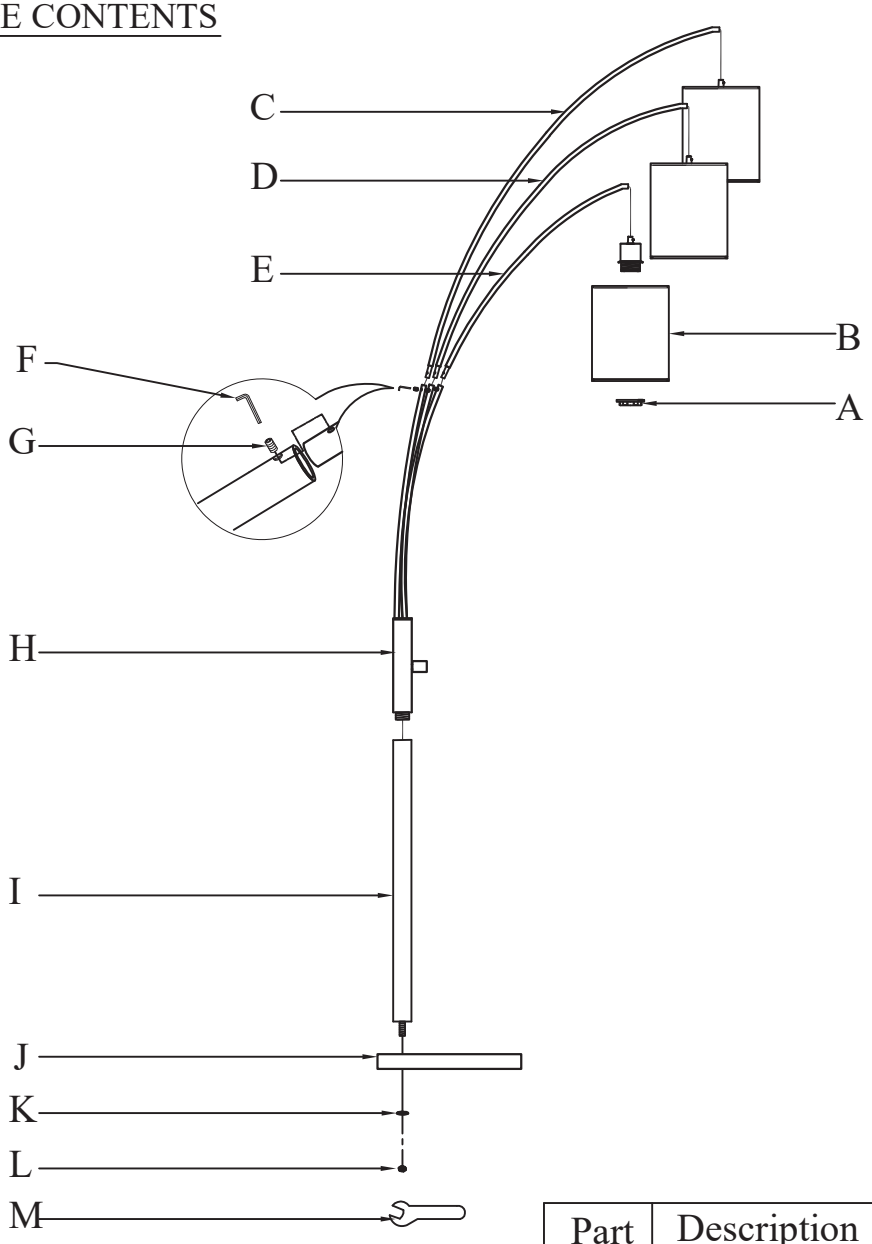

Part	Description	Quantity
A	Socket ring	3
B	Shade	3
C	Upper arm-1 assembly	1
D	Upper arm-2 assembly	1
E	Upper arm-3 assembly	1
F	Allen wrench	1

Part	Description	Quantity
G	Small screw	3
H	Lower arm assembly	1
I	Pole	1
J	Base	1
K	Metal washer	1
L	Nut	1
M	Wrench	1

Assembly instructions


1. Unpack the lamp and Assemble the upper arms assembly

Carefully organize and place all parts on a smooth, flat surface. line up all of the parts according to the assembly diagram.

Insert the pin on bottom of upper arm-1 assembly (C) into hole in lower arm assembly (H) and secure with one small screws (G). (Allen wrench (F) included)

Insert the pin on bottom of upper arm-2 assembly (D) into hole in lower arm assembly (H) and secure with one small screws (G). (Allen wrench (F) included)


Insert the pin on bottom of upper arm-3 assembly (E) into hole in lower arm assembly (H) and secure with one small screws (G). (Allen wrench (F) included)

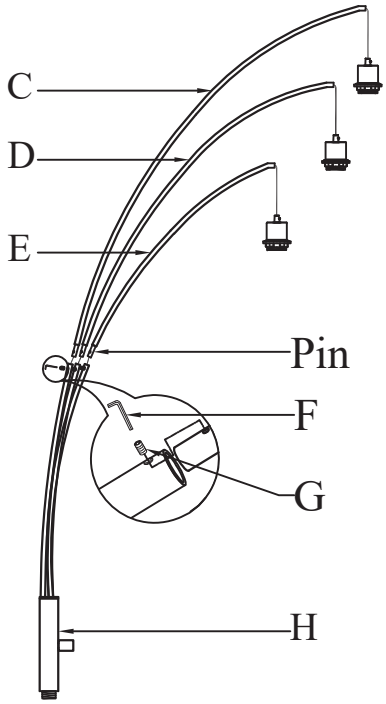

2. Assemble the lower arm assembly

Pull the excess power cord through the pole (I).

Screw the pole (I) to bottom of the lower arm assembly (H).

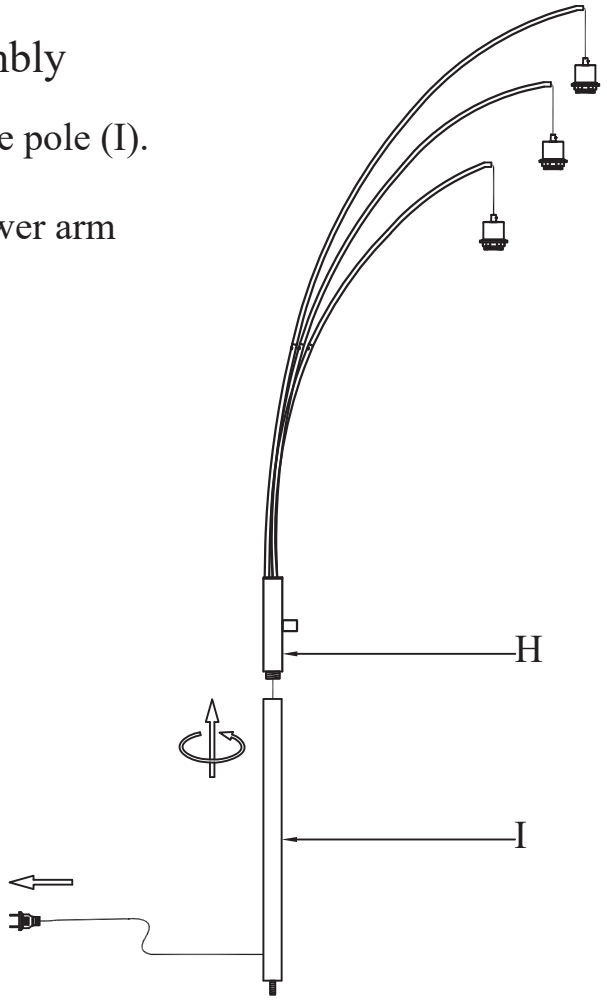


Assembly instructions (continued)

3. Assemble the base

Insert nipple of lower pole (I) into hole in base (J), then secure with metal washer (K) and nut (L) from bottom of the base (J), wrench (M) included.


NOTE: Please make sure the sockets face front as shown.

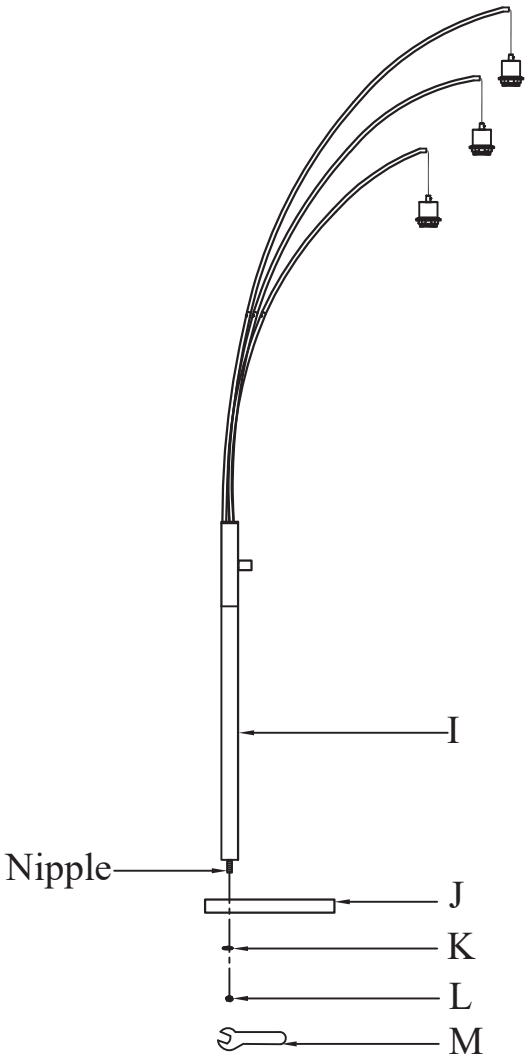

4. Assemble the shades

Remove the socket rings (A) from sockets by unscrewing the socket rings (A).

Place one shade (B) over each socket and secure with a socket ring (A).

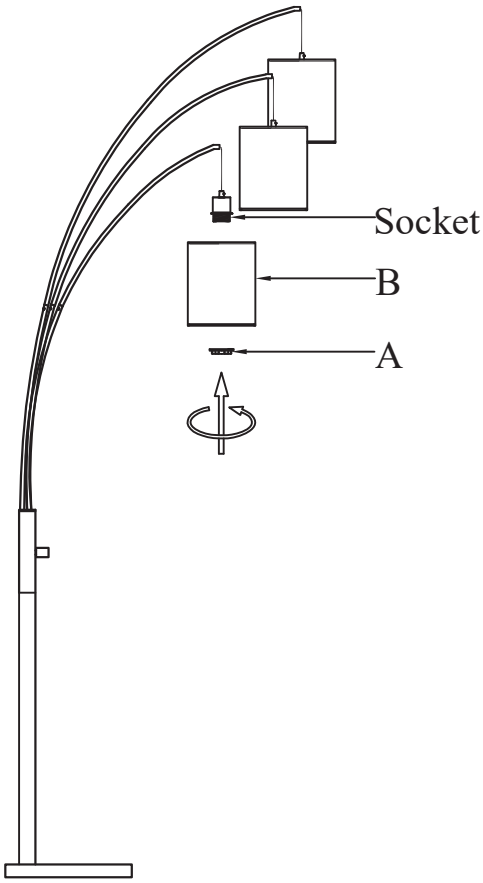

Assembly instructions (continued)


5. Install the bulbs

Prior to installing the bulbs, inspect sockets for silica packet. If packet is present, then remove and throw away. Do not expose it to children or pets.

Install three 120V, 60Hz, 60-watt max. medium-base type A bulbs (not included) into the sockets of the light lamp.

Plug cord into an outlet and turn on at the switch.

Note: The three rotatable lamp branches can be rotated by 16".

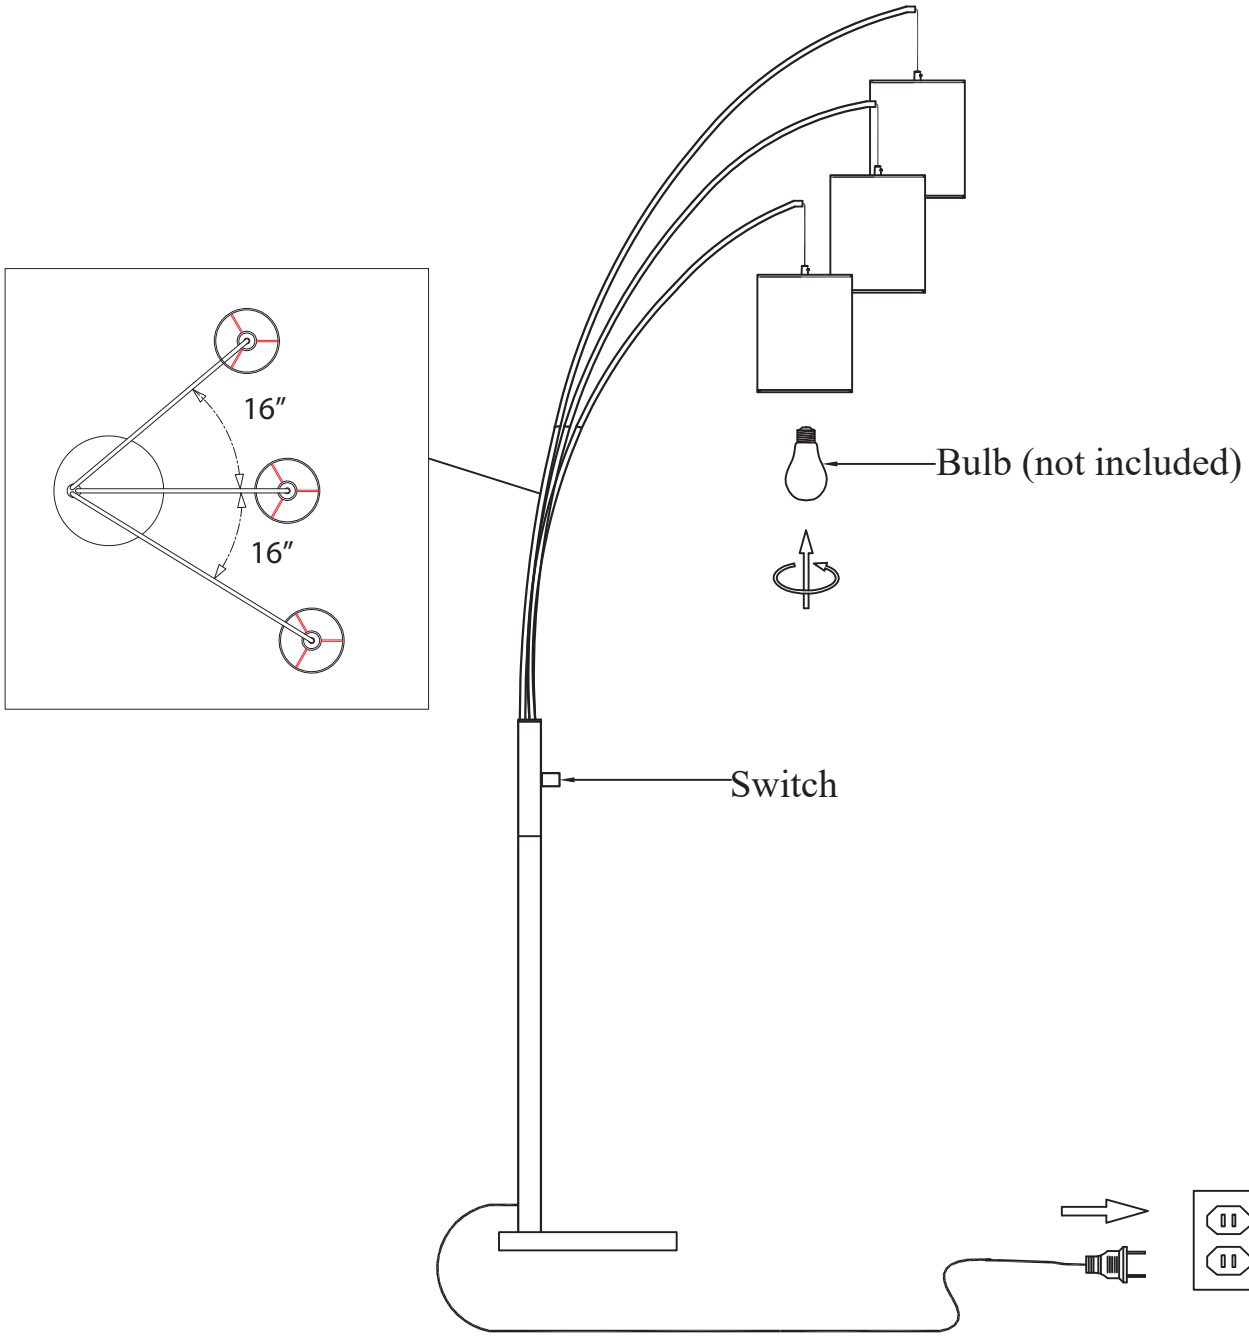

Important safety instructions

This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

Care and Cleaning

Clean the lamp with a soft, dry cloth. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The bulb is burned out.	Replace the light bulb.
	The power is off.	Ensure that the power supply is turned on.
	Did not insert plug into power outlet.	Ensure that the plug is fully and properly inserted into the power outlet.
	The circuit breaker is off.	Ensure that the circuit breaker is set in the on position.
The fuse blows or a circuit breaker trips when the light is turned on.	There is an exposed wire. There are too many items on one circuit.	Discontinue use of the lamp. Contact a qualified electrician or reach the Customer Service Team at consumer@luciditylights.com Unplug other items on the circuit.

KenroyHome

ALL•TOGHTHER•BETTER

www.luciditylights.com

CUSTOMER SUPPORT TEAM

For any additional questions or concerns please contact our Customer Support Team:

consumer@luciditylights.com