INSTALLATION MANUAL

Model: 3007

Edition:20240508V1.1

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, install or operate the product.

WARNING:


Disconnect power by turning off the circuit breaker or by removing the fuse at the fuse box. (All electrical steps should be performed by a qualified person or electrician.)

Ensure wiring and outlet box are compliant with national and local electrical codes, including the NEC. SkyOutlet requires installation on the branch circuit solid 12 or 14 AWG wire.

CAUTION:

To reduce risk of fire, use six (6) E12 **Max 60-watt** incandescent G16.5 bulbs or CFL/LED equivalent (bulbs not included). This fixture is meant for indoor use, **SUITABLE FOR DRY LOCATIONS AND DAMP LOCATIONS**.

TOOL NEEDED:(NOT PROVIDED)

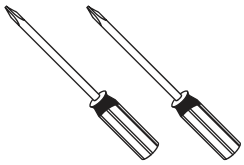


Ph#1&2



Safety Glasses



Step Ladder

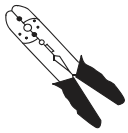


Wire Stripper



Pliers




Wrench



Soft Cloth

PACKAGE CONTENT

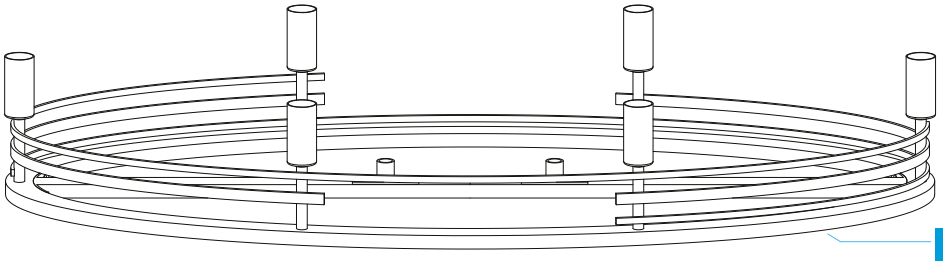


A *Fixture Body x1*

MOUNTING HARDWARE



AA *SkyOutlet x1*
with 2 rubber washers and 2 mounting screws



BB *Cover Plate x1*




CC *Cap x1*
Use when cleaning & painting or when fixture is not in use



DD *4mm Washer x2*
7mm Washer x2

EE *Jumper Lead x2*
Optional



FF *Canopy x1*

GG *Hexnut x2*

HH *Lockwasher x2*

II *12" Rod x6*

JJ *6" Rod x4*

For assistance, email support@skyplug.com


Install SkyOutlet

IMPORTANT:
Disconnect power by turning off the circuit breaker or by removing the fuse at the box. All electrical steps should be performed by a qualified person or electrician.


Scan QR code below for reviewing SkyOutlet installation video.

1 Wire SkyOutlet to ceiling junction box.

A. Strip wire to 9/16"/14mm.

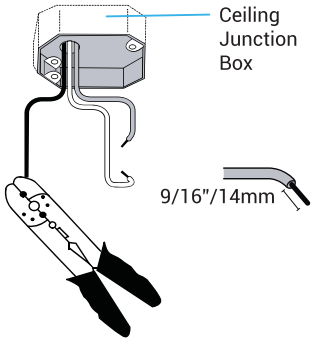


B. Loosen terminal screws to insert branch circuit wires into the corresponding terminals. Tighten to secure wires. Check to make sure wires are securely inserted into terminals. Set screw torque value at 6.3 lb/in.

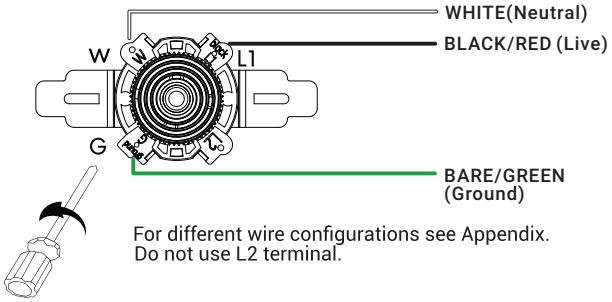

For different wire configurations see Appendix.
Do not use L2 terminal.


2 Secure SkyOutlet to outlet box using 2 screws and washers (included).

For different wire configurations see Appendix.

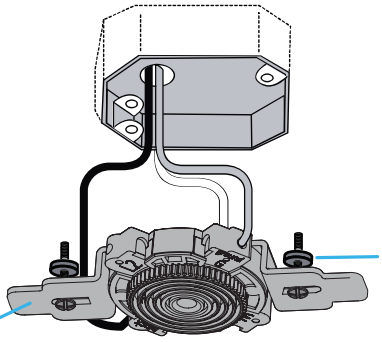


Washer
Washers will align the SkyOutlet with ceiling surface if the outlet box is recessed.

IMPORTANT: If your box is flush with ceiling or recessed less than 1.5 mm (0.06”), use 4 mm washer. If recessed between 1.5 mm (0.06”) and 3 mm (0.12”) use larger 7 mm rubber washer. If recessed more, use combination of both washers.

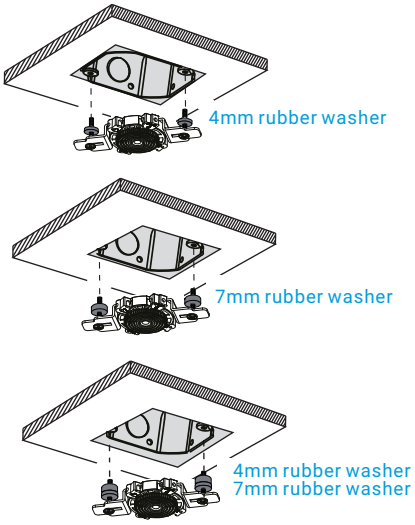

3 Secure cover plate as shown.

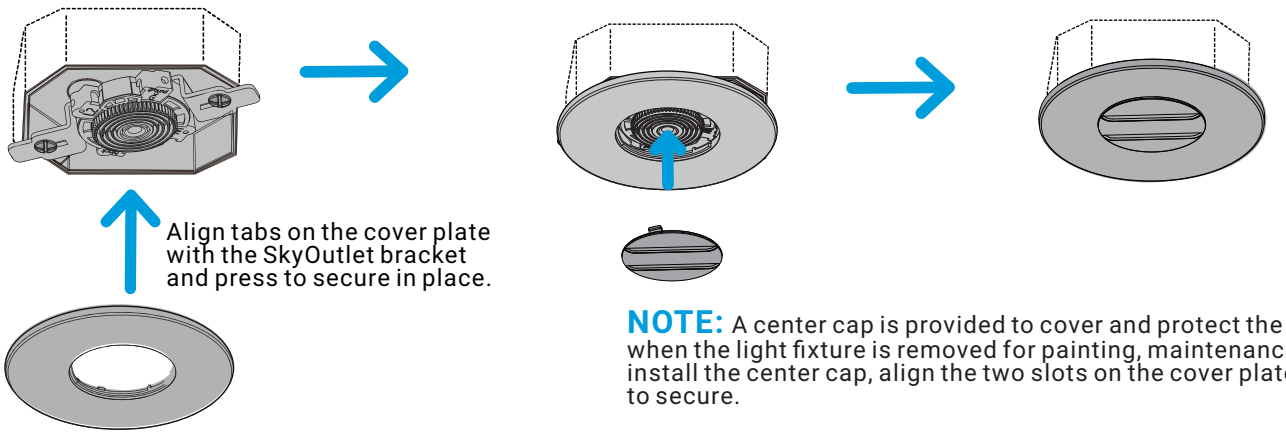


NOTE: A center cap is provided to cover and protect the SkyOutlet when the light fixture is removed for painting, maintenance, etc. To install the center cap, align the two slots on the cover plate and turn to secure.

Assemble Fixture (All steps can be assembled on the floor.)

Scan QR code below for reviewing multiple rod fixture installation video.

1 Install fixture rod and canopy.


Determine preferred hanging height of fixture and install rods with canopy.
Feed fixture wire through rod and over canopy.
Secure and tighten Hexnut and Lockwasher to Rod.

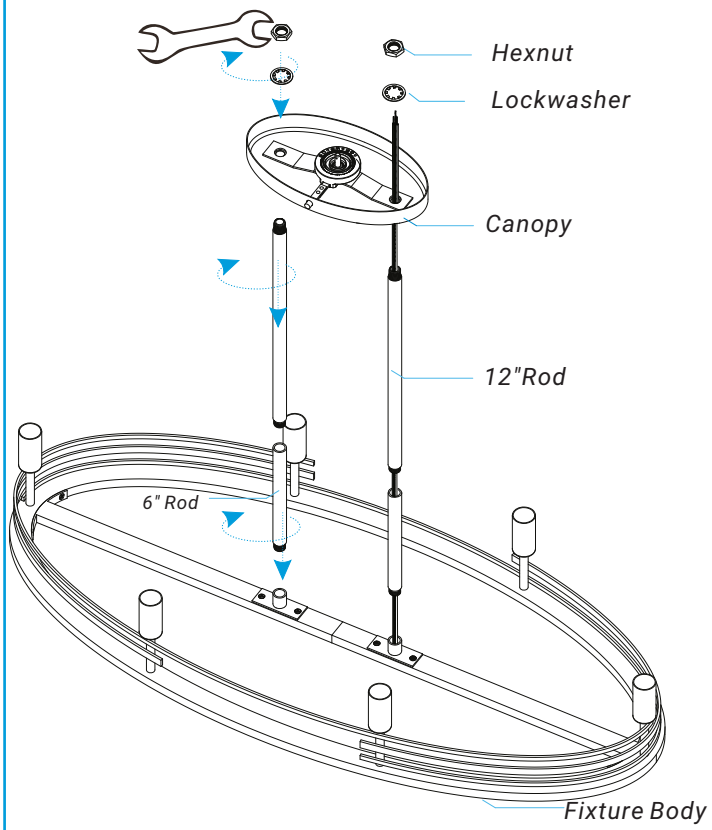

2 Wire SkyPlug.

Measure the leads to cut excess wire and strip the leads.
Recommended leads length 3", strip length 3/16".


Insert Live (Black Wire) into L1,
Neutral (White wire) into W,
Ground wire (bare copper) into G.
Tighten screws to secure wire.

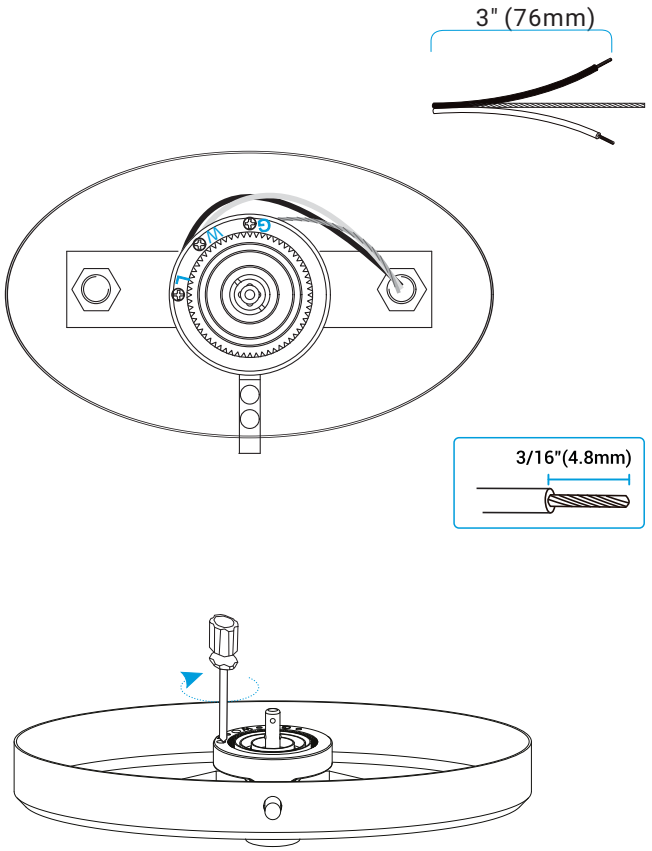

IMPORTANT: Make sure wires are not positioned on top of SkyPlug.

3 Install bulbs *(not included)*.


Recommended Bulb Type:E12-G16.5, Max.60W

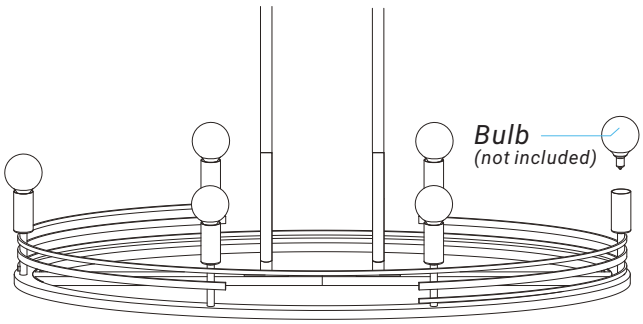


Connect SkyPlug to SkyOutlet

While supporting fixture, plug into the SkyOutlet.

Align with the center hole, keep pressing the push button to insert into the SkyOutlet.

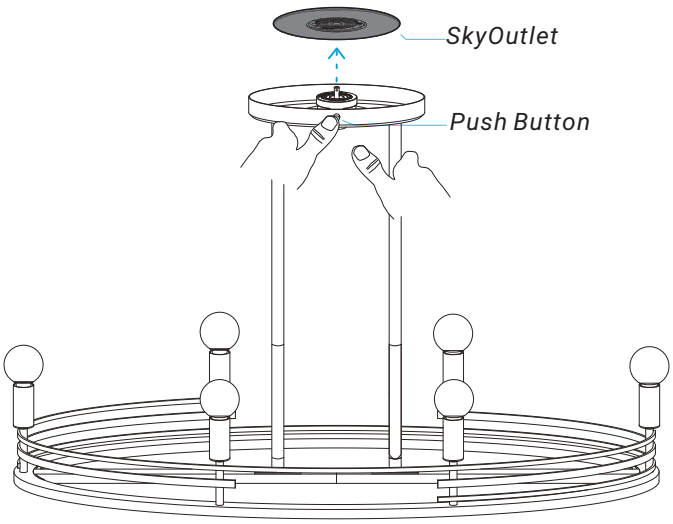


Once inserted, let go of the push button and push up until you hear the click.

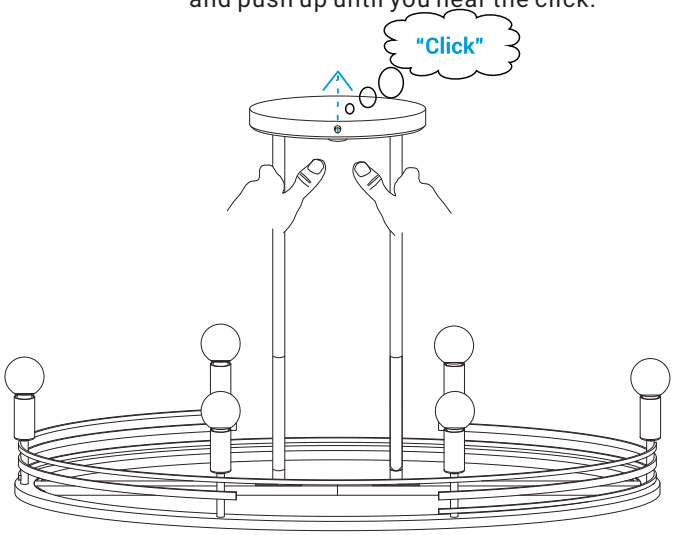

Your installation is now complete! Restore electricity and save this manual for future reference.


Removing SkyPlug Fixtures

1

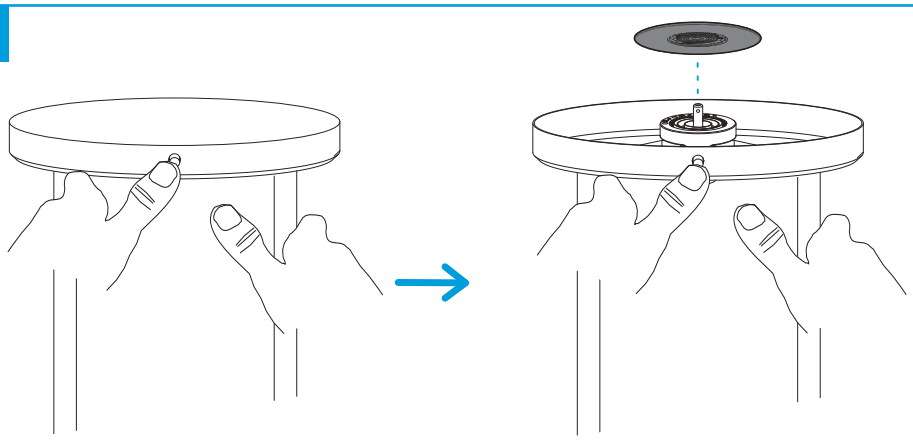

While supporting fixture, press push button to disengage SkyPlug from SkyOutlet.

2

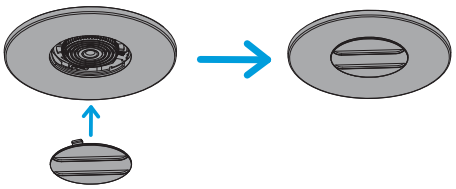


Cover up SkyOutlet when not in use .


APPENDIX
Additional Wiring Diagram

IMPORTANT: If you have multiple wires inside your outlet box, you will need to determine which lead is the live or switched lead and insert this lead into L1. If you are not sure how your house is wired, contact 1-866-885-4649 for questions or contact an electrician. When multiple wires are connected together use a solid wire 12 or 14 AWG JUMPER LEAD (included) to insert into the receptacle terminal. **Do not use L2.**


WIRING DIAGRAM#1:

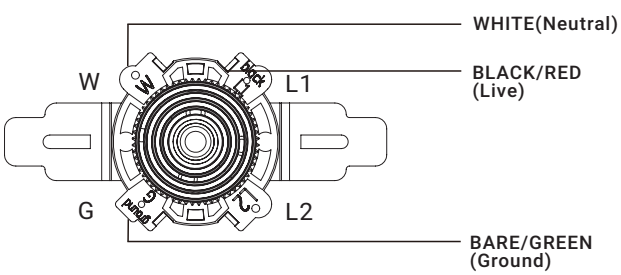


WIRING DIAGRAM#2:

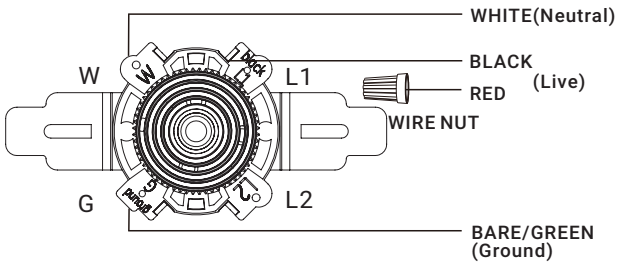


WIRING DIAGRAM#3:

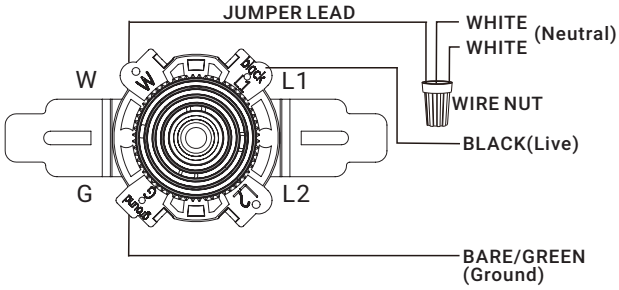

WIRING DIAGRAM#4:

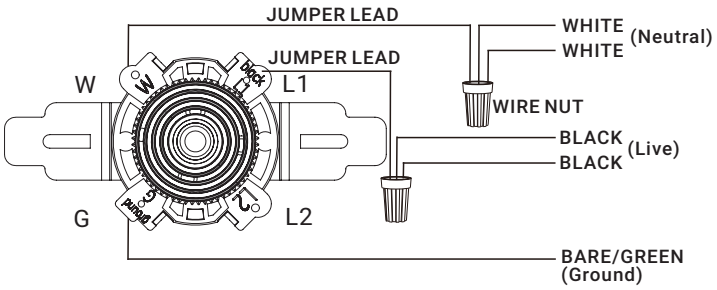

WIRING DIAGRAM#5:

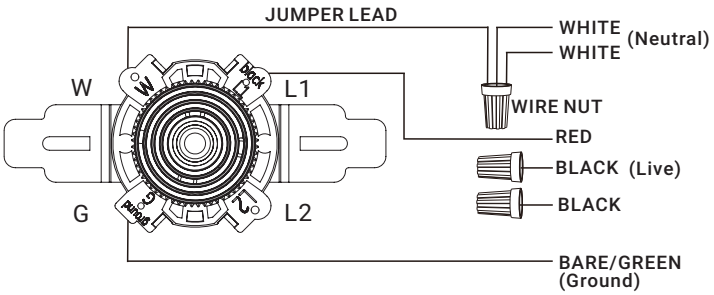

NOTE: If you have multiple wires connected together, add **the included JUMPER LEAD** and insert jumper lead into terminal. Only one single wire can be inserted into terminal (See diagram 3-5).

LIMITED PRODUCT WARRANTY

For warranty info, visit *www.skyplug.com/warranty*.