INSTALLATION MANUAL

Model: 3105

Edition:20240725V1.0

IMPORTANT SAFETY INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, install or operate the product.

WARNING:

Disconnect power by turning off the circuit breaker or by removing the fuse at the fuse box. (All electrical steps should be performed by a qualified person or electrician.)

Ensure wiring and outlet box are compliant with national and local electrical codes, including the NEC. SkyOutlet requires installation on the branch circuit solid 12 or 14 AWG wire.

CAUTION:

To reduce risk of fire, use five (5) E26 **Max 60-watt** incandescent A19/ST58 bulb or CFL/LED equivalent.
This fixture is meant for indoor use, **SUITABLE FOR DRY LOCATIONS AND DAMP LOCATIONS**.

TOOL NEEDED:(NOT PROVIDED)

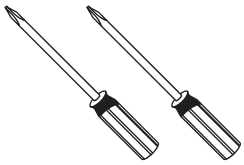

Ph#1&2



Safety Glasses



Step Ladder

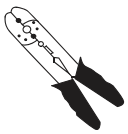

Wire Stripper



Pliers



Soft Cloth

PACKAGE CONTENT

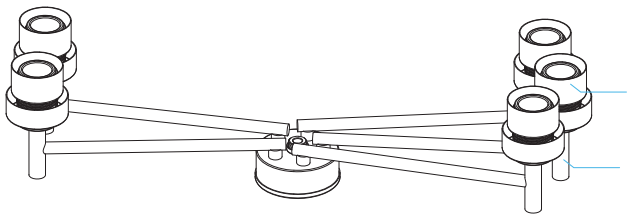

A Socket Ring x5

B Fixture Body x1

C Stem x1

D Rod with Loop x1

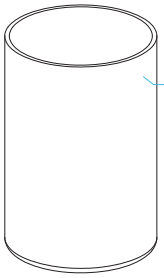

E Glass Shade x5



F LED Bulb x5

MOUNTING HARDWARE



AA *SkyPlug x1*



BB *SkyOutlet x1*
with 2 rubber washers and 2 mounting screws



CC *Cover Plate x1*



DD *Cap x1*
Use when cleaning & painting or when fixture is not in use



EE *4mm Washer x2*
7mm Washer x2

FF *Jumper Lead x2*
Optional



GG *Canopy x1*



HH *Chain Finial with Hanging loop x1*



II *Finial Nut x1*



JJ *Chain x1*



KK *Quick Link x2*

For assistance, email support@skyplug.com

Install SkyOutlet

IMPORTANT:
Disconnect power by turning off the circuit breaker or by removing the fuse at the box. All electrical steps should be performed by a qualified person or electrician.

Scan QR code below for reviewing SkyOutlet installation video.

1 Wire SkyOutlet to ceiling junction box.

A. Strip wire to 9/16"/14mm.

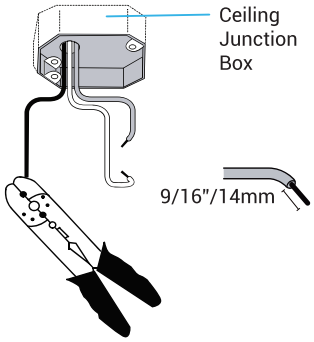

B. Loosen terminal screws to insert branch circuit wires into the corresponding terminals. Tighten to secure wires. Check to make sure wires are securely inserted into terminals. Set screw torque value at 6.3 lb/in.

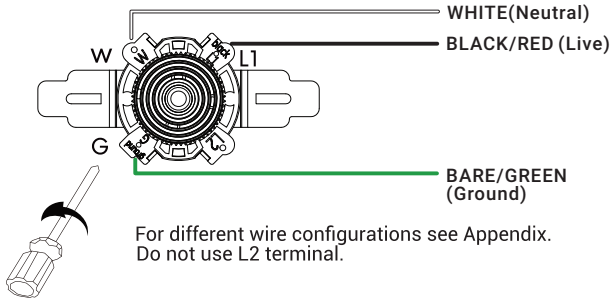

For different wire configurations see Appendix.
Do not use L2 terminal.

2 Secure SkyOutlet to outlet box using 2 screws and washers (included).

For different wire configurations see Appendix.

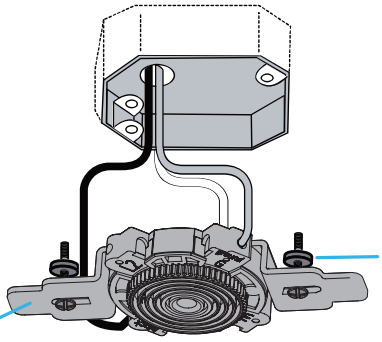

Washer
Washers will align the SkyOutlet with ceiling surface if the outlet box is recessed.

IMPORTANT: If your box is flush with ceiling or recessed less than 1.5 mm (0.06”), use 4 mm washer. If recessed between 1.5 mm (0.06”) and 3 mm (0.12”) use larger 7 mm rubber washer. If recessed more, use combination of both washers.

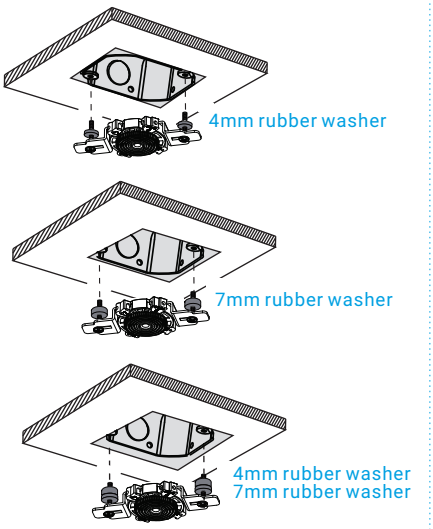

3 Secure cover plate as shown.

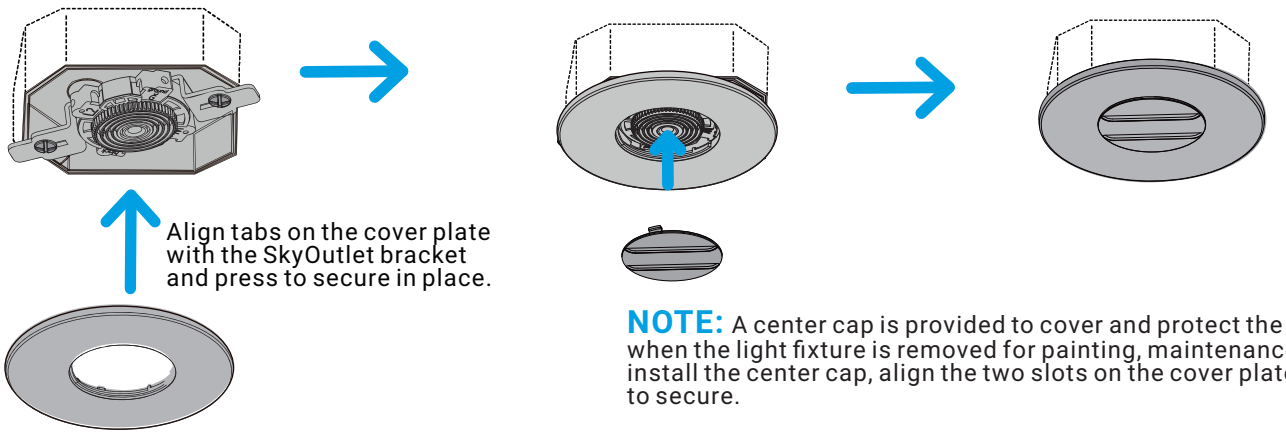

NOTE: A center cap is provided to cover and protect the SkyOutlet when the light fixture is removed for painting, maintenance, etc. To install the center cap, align the two slots on the cover plate and turn to secure.

Assemble Fixture (All steps can be assembled on the floor.)

Scan QR code below for reviewing chain fixture installation video.

1 Open the arms. Install stem and rod with loop.

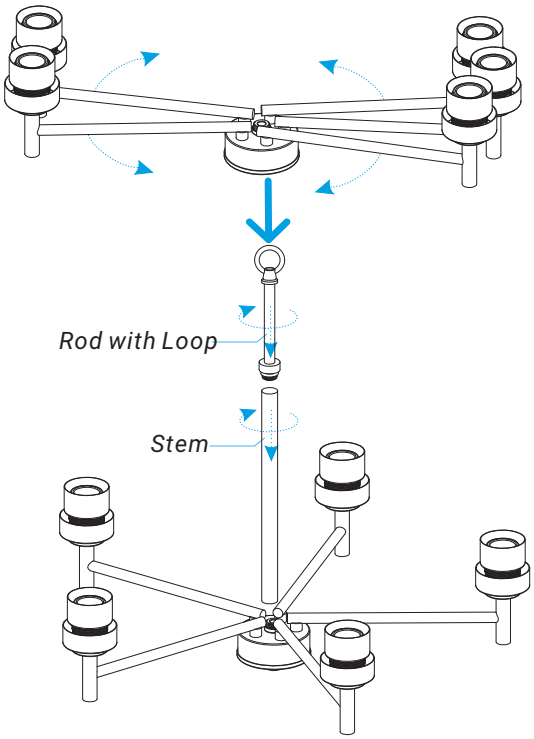

2 Install fixture chain.

Determine the hanging height, remove links if need.

Place Finial Nut & Canopy down the chain in the order as shown. Loop fixture wire through Chain and Finial.

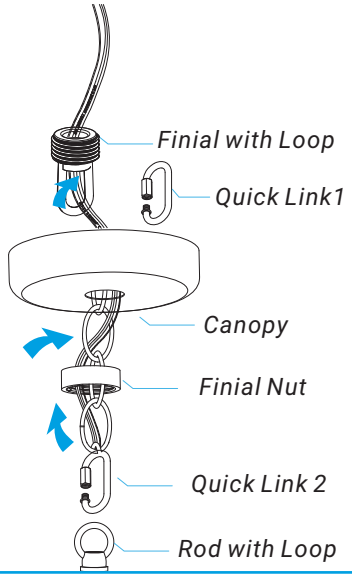

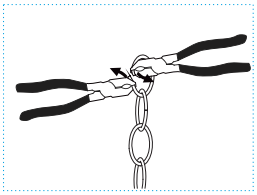

To open links, use two sets of pliers to twist link open.

NOTE: *Do not attach Finial to Loop with Quick Link until SkyPlug is wired – leave loose.*

3 Install SkyPlug.

Route wires through the U shape opening.
Attach chain to rod and finial using the two quick links.

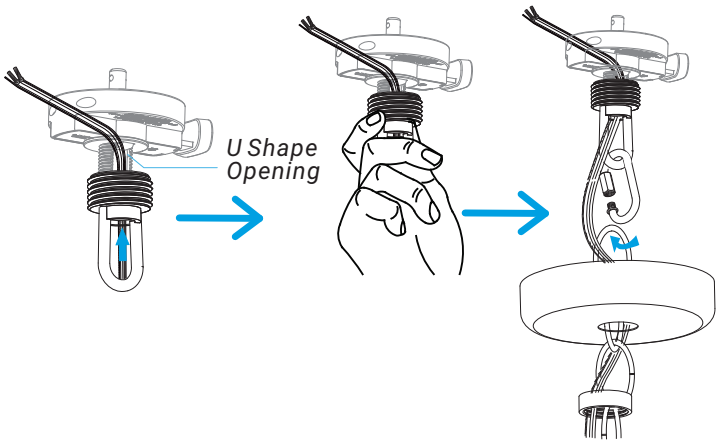

4 Wire SkyPlug.

Measure the leads to cut excess wire and strip the leads.
Recommended leads length 3", strip length 3/16".

Insert Live (Writing /Smooth edge) into L1, Neutral (No Writing/Rough edge) into W, Ground *(Bare)* into G.
Tighten screws to secure wire.

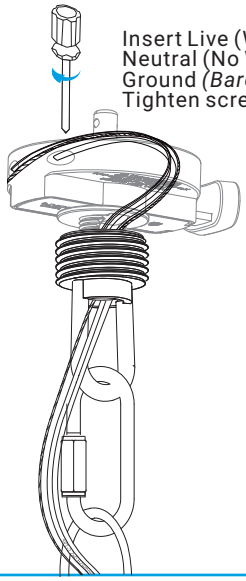

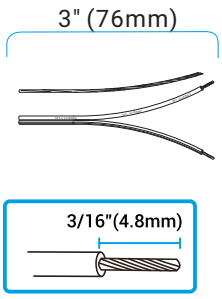

5 Install Glass Shades. Install provided LED bulbs.

Recommended Bulb Type: E26-A19/ST58, Max.60W

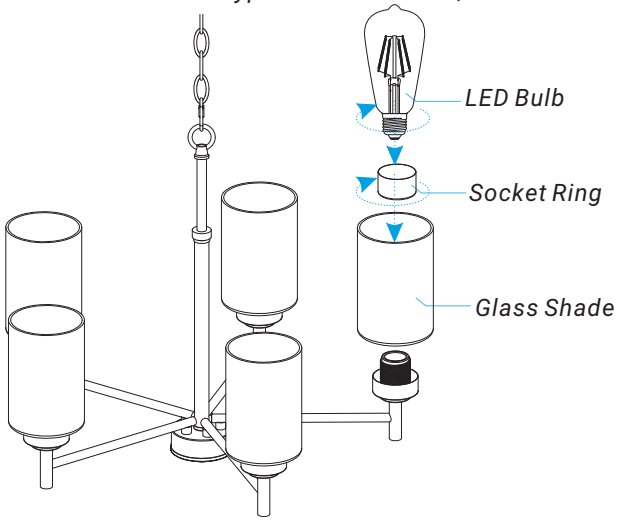

Connect SkyPlug to SkyOutlet

1 While supporting the fixture, plug into the SkyOutlet.

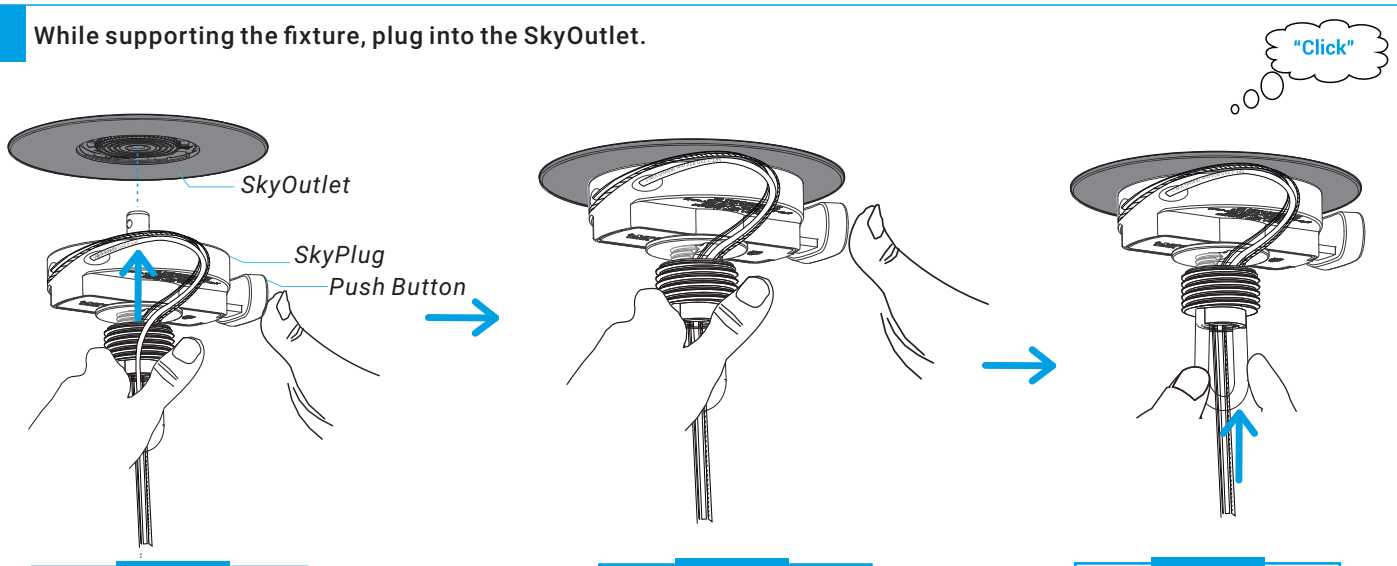

Align with the center hole and press the push button to insert into the SkyOutlet.

Keep button pressed in while inserting SkyPlug into the SkyOutlet.

Once inserted, let go of the push button and push up until you hear the "click" sound.

2 Once plugged in, slide the Canopy up to the ceiling surface and secure in place with the finial nut.

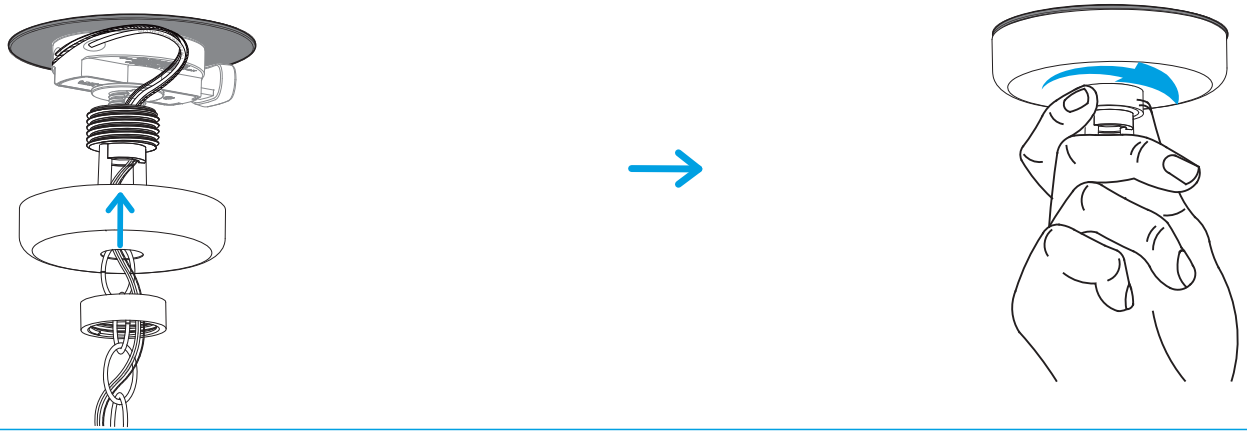

Your installation is now complete! Restore electricity and save this manual for future reference.

Removing SkyPlug Fixtures

1

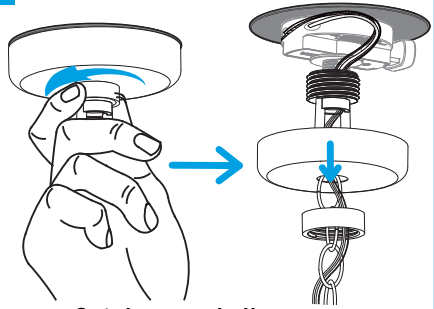

Loosen finial nut and allow canopy to drop down.

2

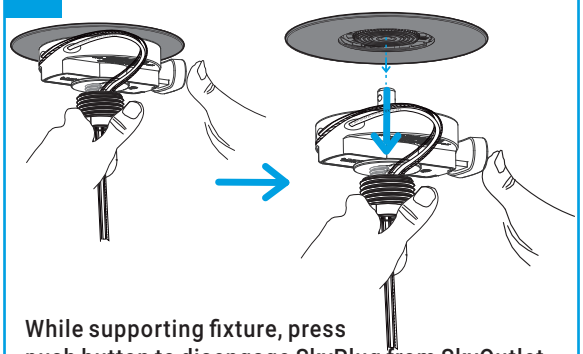

While supporting fixture, press push button to disengage SkyPlug from SkyOutlet.

3

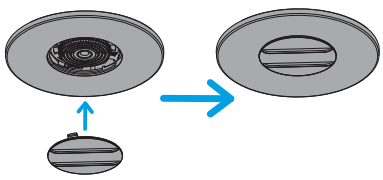

Cover up SkyOutlet when not in use .

APPENDIX
Additional Wiring Diagram

IMPORTANT: If you have multiple wires inside your outlet box, you will need to determine which lead is the live or switched lead and insert this lead into L1. If you are not sure how your house is wired, contact 1-866-885-4649 for questions or contact an electrician. When multiple wires are connected together use a solid wire 12 or 14 AWG JUMPER LEAD (included) to insert into the receptacle terminal. **Do not use L2.**

WIRING DIAGRAM#1:

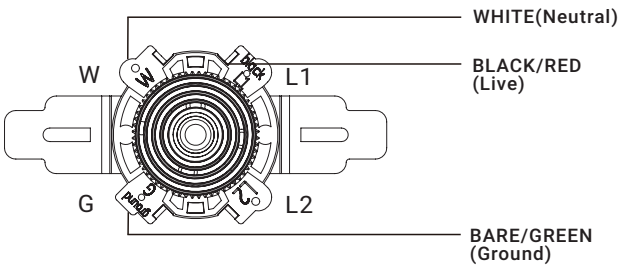

WIRING DIAGRAM#2:

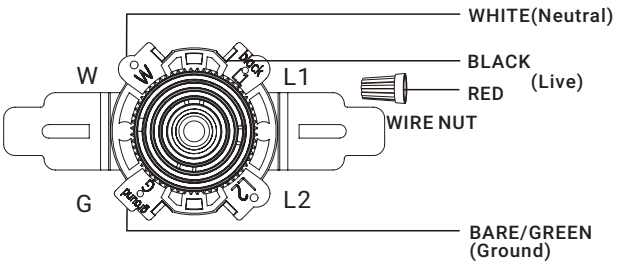

WIRING DIAGRAM#3:

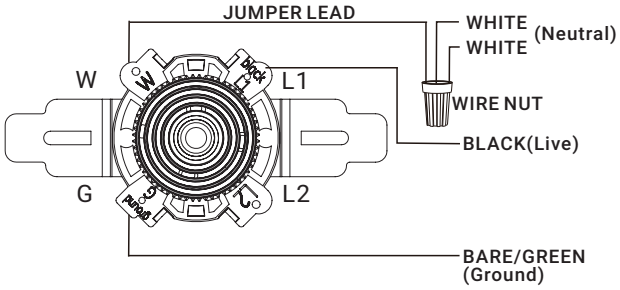

WIRING DIAGRAM#4:

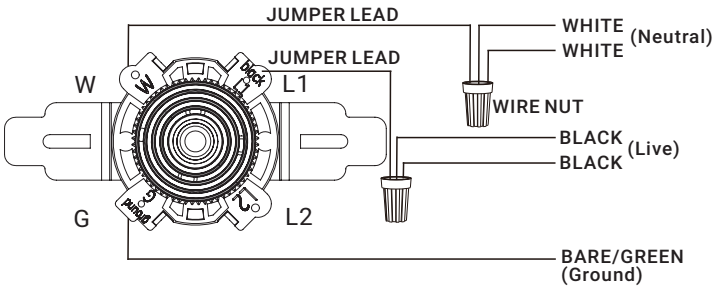

WIRING DIAGRAM#5:

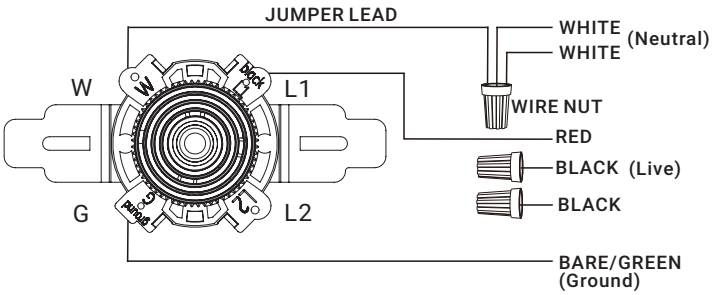

NOTE: If you have multiple wires connected together, add **the included JUMPER LEAD** and insert jumper lead into terminal. Only one single wire can be inserted into terminal (See diagram 3-5).

LIMITED PRODUCT WARRANTY

For warranty info, visit *www.skyplug.com/warranty*.