


CRYSTORAMA LIGHTING

ASSEMBLY INSTRUCTION MODEL# DAV-6005-MG

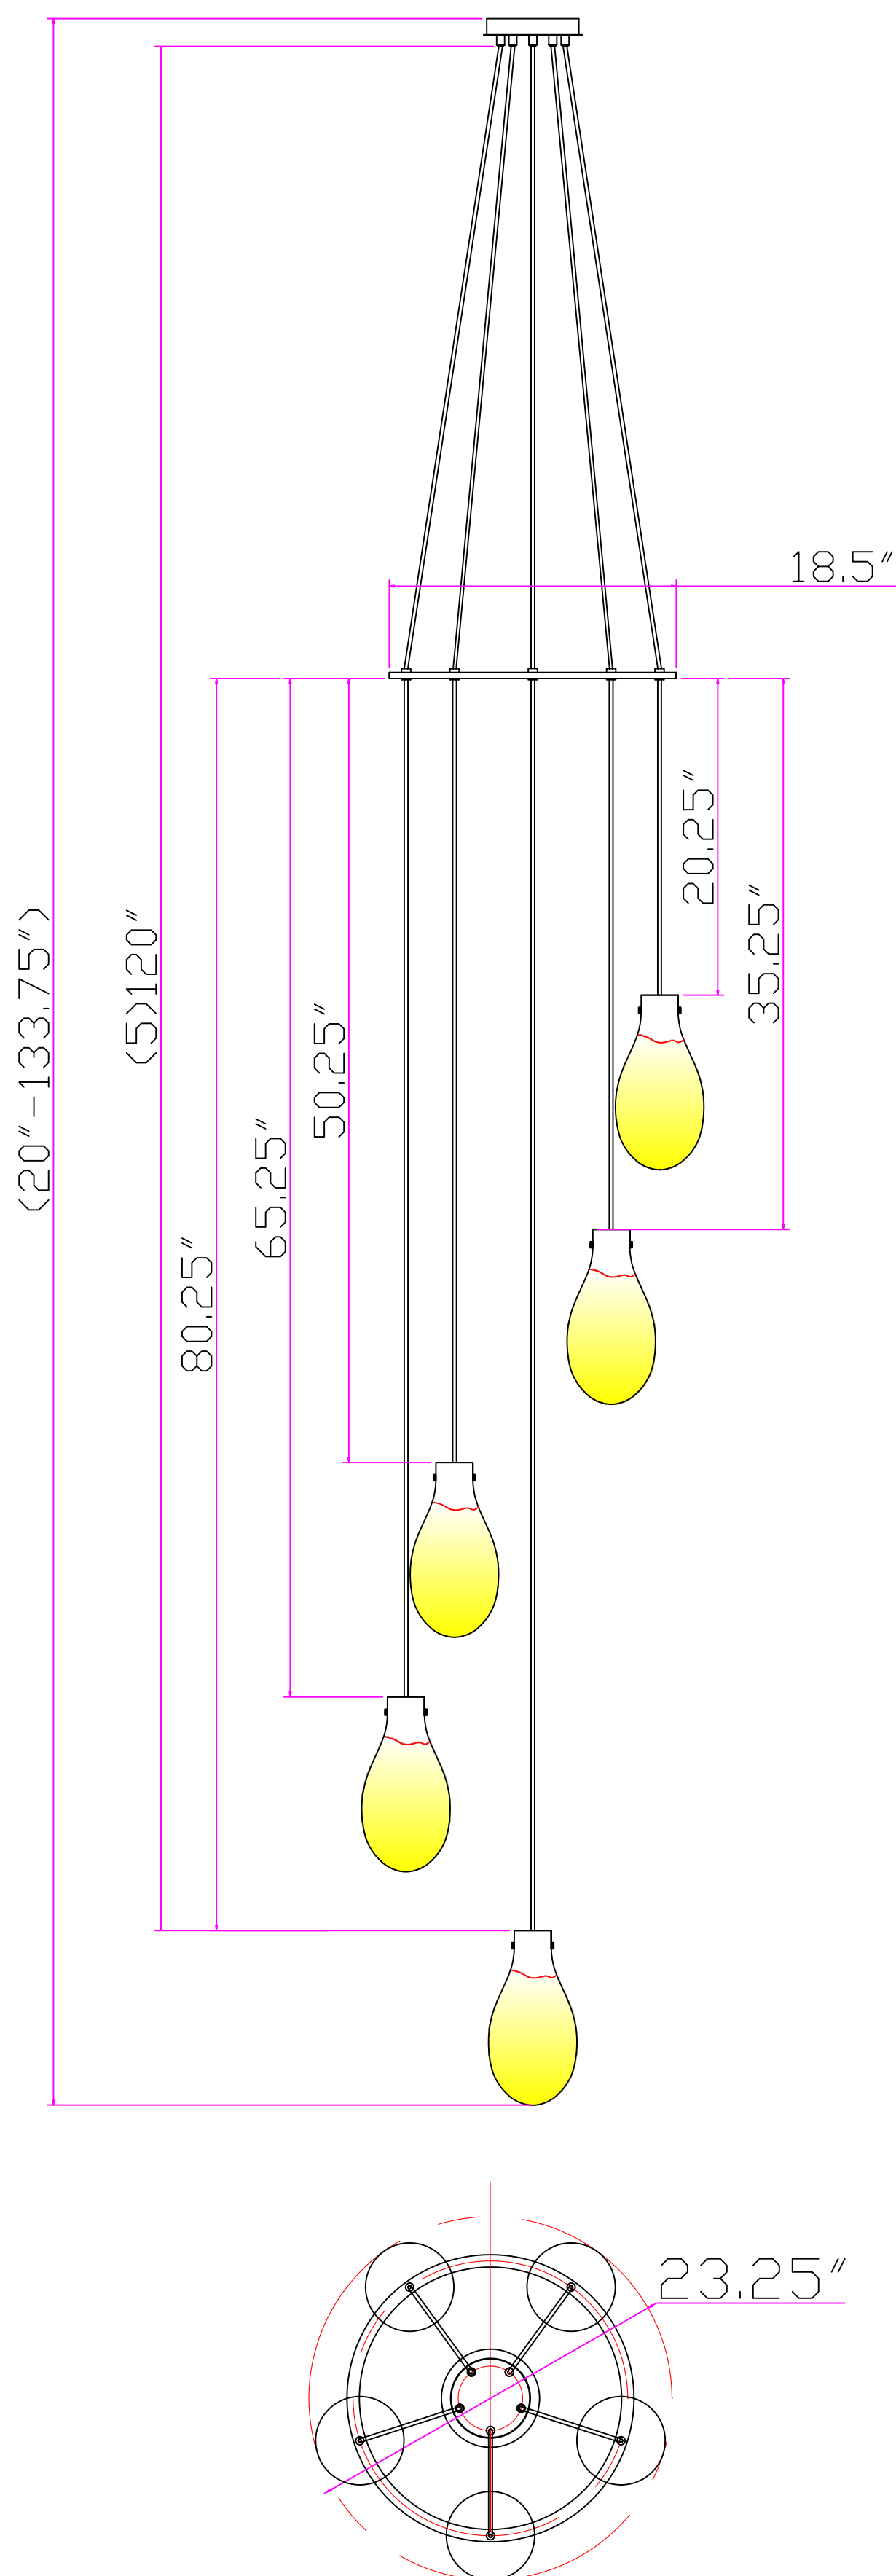

Crystorama.com



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



TYPE T10

Included need 5 - Med T10 LED Bulb
6 Watts Recommended
Use LED Bulbs for Extended Use
The Fixture is Damp Rated

How to install

1. All the cords are pre-set at a fixed length. The height of each light head can be adjusted by loosening these set screws (marked as :H") on the side of the nuts at both the canopy and the ring. Once the adjustment is completed, please secure the set of screws using the screwdriver. Cut off the excess cords inside the canopy. Please do not remove the strain and relief at the cord end.
2. Install the mounting plate to the outlet box using two outlet box screws.

3. Raise the frame up to the ceiling and do the wire connection. Raise the canopy over the outlet box and secure with the side screws.
4. Install the bulb into the socket (bulb included).
5. Slide the glass over the bulb and socket and secure it onto the socket using the cap nuts.

! WARNING: Cutting the cord and rewiring must be performed by a qualified electrician to avoid electrical hazards.

! WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

CRYST◉RAMA LIGHTING



Crystorama.com

ASSEMBLY INSTRUCTION MODEL# DAV-6005-MG

Part Number

- A. (1)-Mounting hardware
- B. (1)-Mounting plate
- C. (1)-Canopy
- D. (2)-Screw;8/32"X10MM
- E. (5)-Bulb;T10X185mm,LED6W
- F. (5)-Glass ;W5.75"XH11.25" (XNO6001GLA11.25IN)
- G. (15)-Cap nut;8/32"X15MM (XNO6001SC 0.6IN)
- H. (10)-Plastic Screw;M6X5MM (XNO6005 PSM6)
- J. (1)-Metal Band;
- K. (5)-Strain;

