INSTALLATION INSTRUCTION

232 –LED Pendant

PD232632

MODERN FORMS®

CAUTION: To prevent electrical shock, ensure electricity has been turned off at the circuit breaker before beginning.

- Read all instructions before installing.
- System is intended for installation by a licensed electrician in accordance with the National Electrical Code (NEC) and local regulations.
- When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the base only.
- Retain installation instructions for future maintenance reference.

WARNING: All parts must be used as indicated in these instructions. This product is designed for use only with the supplied parts and/or accessories designated for use by Modern Forms. Substitution of parts or accessories not designated for use with this product by Modern Forms could result in personal injury or property damage, and will void the warranty. Contact an authorized dealer or the manufacturer if any parts are damaged or missing.

MAINTENANCE NOTE: Coastal conditions may cause mineral and residue build-up on the fixture. We recommend that customers in coastal areas clean all external surfaces of the fixture once every two weeks with a wet cloth.


MISE EN GARDE: Pour éviter tout choc électrique, assurez-vous que le disjoncteur soit mis hors tension avant de commencer.

- Lisez toutes les instructions avant l'installation.
- Le système doit être installé par un électricien licensié conformément au code national de l'électricité (NEC), et également aux règlements locaux.
- Lors de la manipulation du luminaire, n'appuyez pas sur les LED. Tenez-le uniquement par la base.

ATTENTION: Toutes les pièces doivent être utilisées comme indiqué dans ces instructions. Ce produit est conçu pour être utilisé seulement avec les pièces et/ou accessoires fournis pour être utilisés avec les produits Modern Forms. Remplacer des pièces ou accessoires non conçus pour ce produit Modern Forms pourrait causer des dommages corporels ou matériels et pourrait également causer l'annulation de la garantie. Veuillez contacter un revendeur autorisé ou le fabricant si des pièces manquent ou sont endommagées.

NOTE D'ENTRETIEN: Les conditions côtières peut causer une accumulation de minéraux et de résidue sur le luminaire. Nous recommendons aux clients qui resident dans les zones côtières de nettoyer toutes les surfaces externes du luminaire une fois toutes les deux semaines avec un chiffon humide.

HARDWARE:

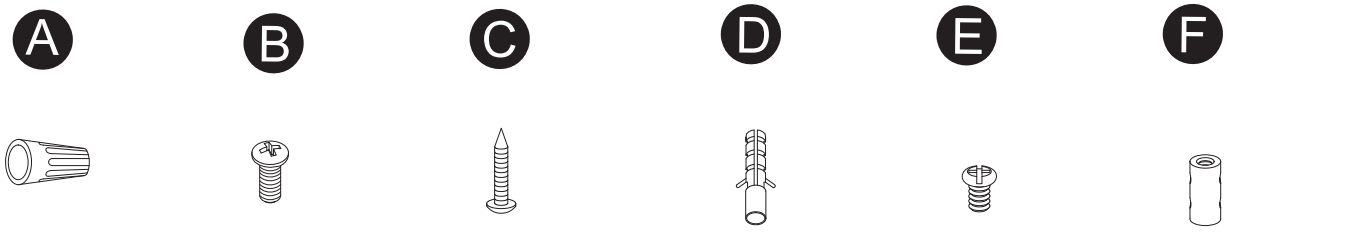

A	B	C	D	E	F
Wire Connector Qty: 7pcs+1 Extra	Mounting Screw Qty: 1 Extra	Wood Screw Qty: 3pcs+1 Extra	Plastic Anchor Qty: 3pcs+1 Extra	Set Screws Qty: 2 pcs+1 Extra	Safety Cable Gripper Qty: 1 pc

ModernForms.com
Phone (866) 810-6615
Fax (800) 526-2585

Headquarters, East Manufacturing Facility
44 Harbor Park Drive
Port Washington, NY 11050

South East Manufacturing Facility
1600 Distribution Ct
Lithia Springs, GA 30122

Central Manufacturing Facility
1700 South J Elmer Freeway, Ste 100
Cedar Hill, TX 75104

West Manufacturing Facility
1750 S Archibald Ave
Ontario, CA 91761

MODERN FORMS retains the right to modify the design of our products at any time as part of the company's continuous improvement program.


INSTALLATION INSTRUCTION

232–LED Pendant

PD232632

MODERN FORMS®

Fig.1

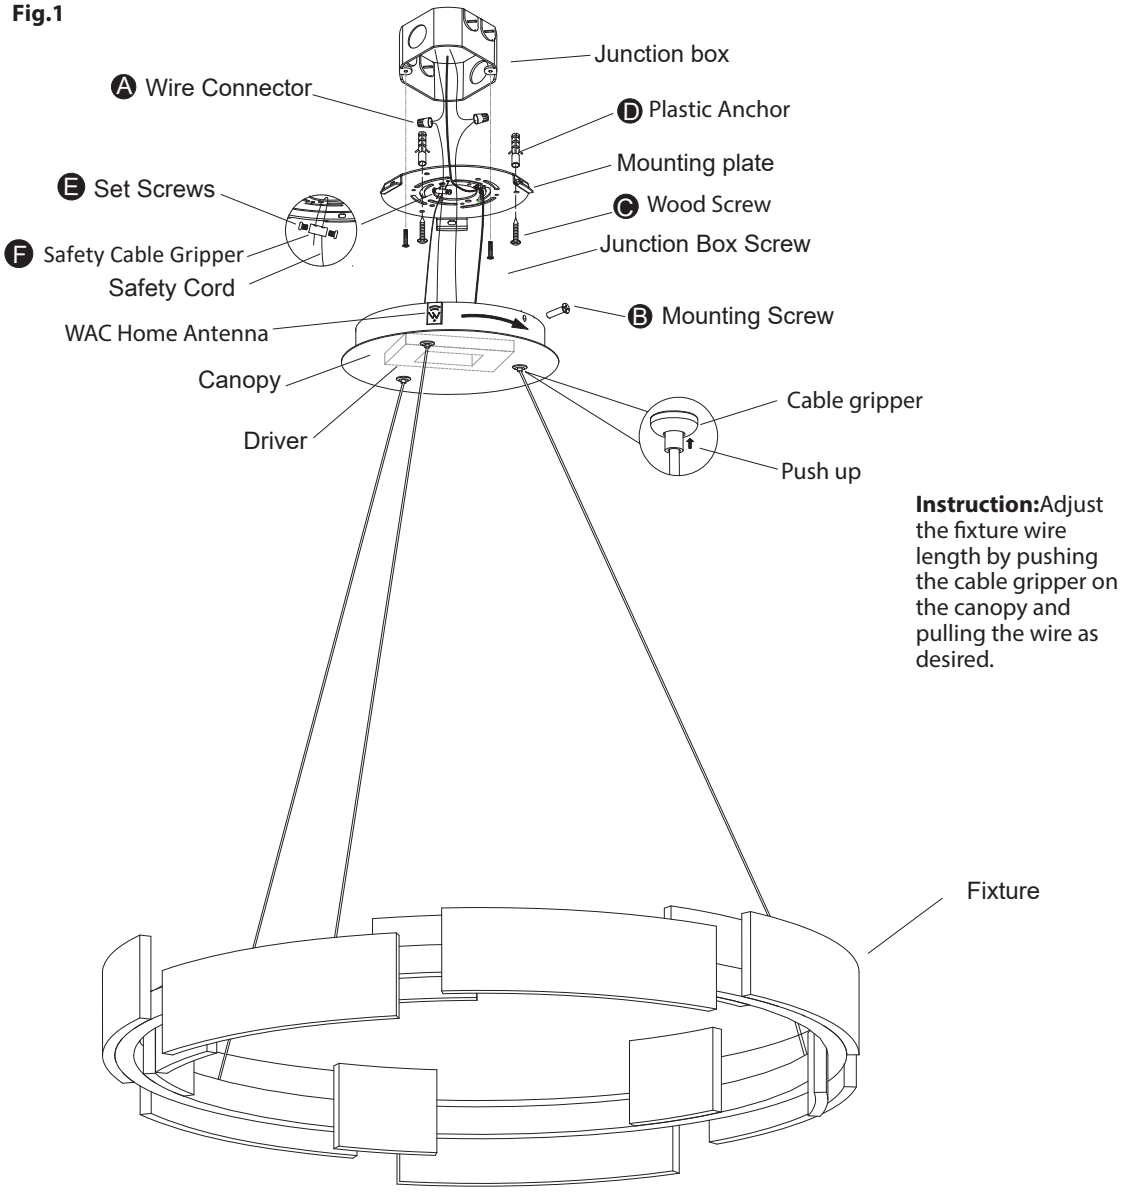

Instruction: Adjust the fixture wire length by pushing the cable gripper on the canopy and pulling the wire as desired.

PREPARATION

1. Shut off the power at the circuit breaker and remove existing fixture, including the crossbar.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Be careful not to lose any small parts necessary for installation.

MOUNTING THE FIXTURE (Fig. 1)

3. Loosen the mounting screw (B) from the fixture, and remove the mounting plate.
4. Drill holes in the wall aligned with the key holes located on the mounting plate. Insert the plastic anchor (D).
5. Secure the mounting plate to the junction box using standard junction box screws that comes with the junction box. Fasten the mounting plate to the wall with the plastic anchors using the wood screws (C) provided.
   Note: (i) Using any other non-original-manufacturer provided junction box screw may result in safety issue;
   (ii) The side of the mounting plate marked "GND" must face out.

ModernForms.com
Phone (866) 810-6615
Fax (800) 526-2585

Headquarters, East Manufacturing Facility
44 Harbor Park Drive
Port Washington, NY 11050

South East Manufacturing Facility
1600 Distribution Ct
Lithia Springs, GA 30122

Central Manufacturing Facility
1700 South J Elmer Freeway, Ste 100
Cedar Hill, TX 75104

West Manufacturing Facility
1750 S Archibald Ave
Ontario, CA 91761

6. Adjust the fixture wire length by pushing the cable gripper on the canopy and pulling the wire as desired.
   a) Before securing the canopy in place, it is recommended to retract or extend the wire within the canopy to a desirable length.
   b) Due to limited space within the canopy, shorten the cable as necessary to make the installation easier. Make sure to identify and label all the wiring properly before any trimming/shortening (Fig. 3).
7. Loosen the set screws(E) on the safety cable gripper(F), thread the safety cords through the gripper (F), mounting plate, and out the other end of the gripper (F) as shown(Fig. 1), then tighten the two set screws(E) and adjust the safety cords length so there is ample room to work with.

CONNECTING THE WIRES (Fig.1/Fig. 2 / Fig. 3)

8. Connect the driver's output wires to center cable as shown in Fig. 3, red to the clear+,black to the green W-, and blue to wihte C-, make sure that wire connectors(A) are secured. Then tuck them inside the canopy.
9. Connect the driver's input wires to junction box wires as shown in Fig. 2, make sure that all wire connectors(A) are secured. If your outlet box has a green or bare copper ground wire, connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the back plate using the screw provided. After wires are connected, tuck them carefully inside the junction box.

CONNECTING THE INSTALLATION


10. Lift and mount the canopy against the ceiling plate. Rotate the canopy in the direction of the arrow until it stops. Fasten the canopy in place using the canopy screw (B).

Fig.2 Wiring




Fixture Wires	House Wires
Black or Smooth	Black (Hot)
Fixture Wires	**House Wires**
White or Ribbed	White (Neutral)
Fixture Wires	**House Wires**
Bare wire (Ground)	Green or Bare Copper (Ground)

Fig.3 Driver Wires

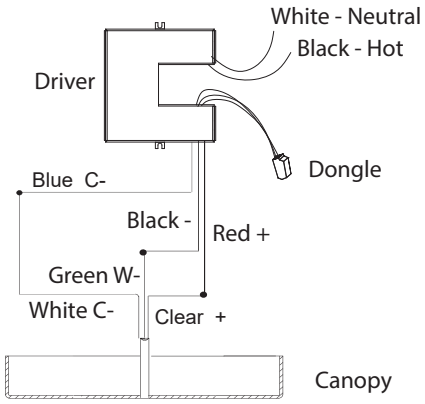

Mounting Plate Dimensions

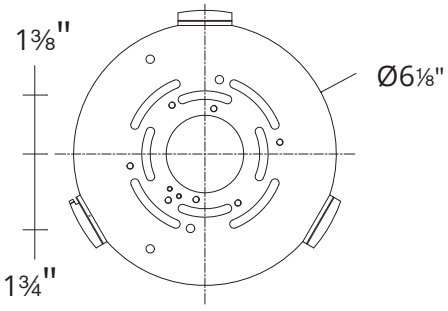

MODERN FORMS retains the right to modify the design of our products at any time as part of the company's continuous improvement program.